# **DIN Rail Mount**

## CTR Series

### DIN Rail Mountable SSRs Three-Phase

Crydom CTR Series Solid State Relays were developed to offer the advantages of semiconductor switching technology in a compact, self contained package. Quick and easy installation is coupled with low drive power requirements and efficient, reliable power SCR output.

#### **FEATURES**

- DIN rail or panel mount 90 mm (width) package
- Box Clamp terminals
- Bracket fits all standard 35 mm DIN rail profiles.
- LED input status indicator

#### PART NUMBER NOMENCLATURE

**Control Voltage** B: 90-140 VAC C: 180-280 VAC D: 4-32 VDC

**Operational Current** 25: 25 Amps / Phase

Series

Switching Mode

(DC Control only)

-10: Random Turn-On

Blank: Zero Voltage Turn-On

**Operational Voltage** 

60: 48-600 VAC

- Required for valid part number
- For options only and not required for valid part number
- (A) The air gap is the clearance distance adjacent to either side of the relay or assembly measured to the next closer relay or assembly.
- (B) CTRCxxxx is rated at 60°C max, ambient.
- (C) 100% Duty Cycle.

#### MOUNTING INSTRUCTIONS

Please read all installation instructions before using CTR Series SSRs.

Choose one of the two mounting options and follow the instructions below.

#### Mounting on DIN Rail


- Locate rail and align with non moveable end of CTR DIN clip.
- Using reasonable force, push CTR in the direction of the arrow shown in fig.1.
- For removal pull release tag in direction of arrow using blade of screwdriver and pull it away from DIN rail.

# on DIN rail To remove from DIN rail

fig.1 Mounting on DIN Rail

#### Mounting on Panel

- Locate the panel section on which the CTR SSR will be mounted on.
- DIN clip includes tabs for this type of mounting. Tab holes have a diameter of 4.5 mm. You will need two screws (not included) no larger than that to mount the SSR onto panel.
- Align SSR tabs with panel surface and screw both top and bottom sides. Recommended torque is 12 in-lbs (1.36 Nm).

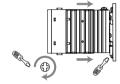

#### IMPORTANT CONSIDERATIONS

#### Mounting air gap (A)

To achieve maximum ratings if multiple units are installed, there must be a minimum air gap of 0.8 in (20 mm) between the devices (horizontally) and of 3.15 in (80 mm) measured between DIN clip tabs (vertically).

#### Earth Bonding (Grounding)

The CTR heat sink is equiped with an earth bonding screw as is required for Class 1 Protection, in accordance with EN 60950 (VDE 0804). Recommended torque is 20 in-lbs (2.2 Nm).

Rev: 062411




### Do not forget to visit us at: www.crydom.com

## crydom

## **DIN Rail Mount**

#### DERATING CURVES (B, C)

The following deating curves must be observed before installation.

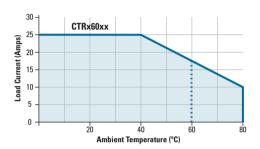

#### WIRING DIAGRAM

#### ■ Wire Size


Maximum wire size of AWG #16 (1.3 mm<sup>2</sup>) on input and AWG #8 (8.4 mm<sup>2</sup>) output terminals.

#### Connections

Ensure that wires ends are stripped to a minimum length of 0.4 in (10 mm).

#### ■ Recommended Screw Torque Range

4.4 in-lbs (0.5 Nm) on input and 12 in-lbs (1.3 Nm) on output.

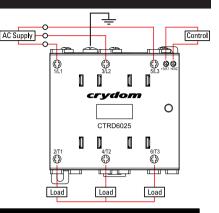

#### HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

Turn off power supply before working on this equipment.

Failure to follow these instructions will result in death or serious injury.

#### RIESGO DE ELECTROCUCIÓN, EXPLOSIÓN O ARCO ELÉCTRICO

 Desconecte toda alimentación antes de realizar el servicio. Si no se siguen estas instrucciones provocará lesiones graves

o incluso la muerte.

#### ▲ DANGER / DANGER / GEFARH / PELIGRO / PERICOLO / 危险

RISQUE D'ELECTROCUTION, D'EXPLOSION OU D'ARC ELECTRIQUE

 Coupez l'alimentation avant de travailler sur cet appareil. Le non-respect de ces instructions provoquera la mort ou des blessures graves.

#### RISCHIO DI SCOSSA ELETTRICA, DI ESPLOSIONE O DI OFTALMIA DA FLASH

- · Scollegare l'apparecchio dalla presa di corrente prima di qualsiasi intervento.
- Il mancato rispetto di gueste istruzioni provocherà morte o gravi infortuni.

STROMSCHLAG-, EXPLOSIONS- ODER LICHTBOGENGEFAHR

 Vor dem Arbeiten an dem Gerät dessen Stromversorgung abschalten. Die Nichtbeachtung dieser Anweisungen führt zu Tod oder schwerer Körperverletzung.

存在电击. 爆炸或电弧闪烁危险

• 在操作此设备之前请先关闭电源。

若不遵守这些说明,可能会导致严重的人身伤害甚至死亡。

#### ▲ WARNING / AVERTISSEMENT / WARNUNG /ADVERTENCIA / AVVERTENZA / 警告

#### RISK OF MATERIAL DAMAGE AND HOT ENCLOSURE

- . The product's side panels may be hot, allow the product to cool before touching.
- Follow proper mounting instructions including torque values.
- . Do not allow liquids or foreign objects to enter this product.

Failure to follow these instructions can result in serious injury, or equipment damage.

#### RIESGO DE DAÑOS MATERIALES Y DE SOBRECALENTAMIENTO DE LA UNIDAD

- · Los paneles laterales del producto pueden estar calientes. Esperar que el producto se enfríe antes de tocarlo.
- · Respetar las instrucciones de montaje, y en particular los pares de apretado.
- · No dejar que penetren líquidos o cuerpos extraños en el producto.
- Si no se respetan estas precauciones pueden producirse graves lesiones. daños materiales.

#### RISQUE DE DOMMAGE MATERIEL ET DE SURCHAUFFE DU BOITIER

- Les panneaux latéraux du produit peuvent être chauds. Laisser le produit refroidir avant de le toucher.
- Respecter les consignes de montage, et notamment les couples de serrage.
- Ne pas laisser pénétrer de liquide ni de corps étrangers à l'intérieur du produit.
- Le non-respect de cette directive peut entraîner, des lésions corporelles

graves ou des dommages matériels.

#### RISCHIO DI DANNI MATERIALI E D'INVOLUCRO CALDO

- · I pannelli laterali dell'apparecchio possono scottare; lasciar quindi raffreddare il prodotto prima di toccarlo.
- Seguire le istruzioni di montaggio corrette.
- · Non far entrare liquidi o oggetti estranei in questo apparecchio.

La mancata osservanza di questa precauzione può causare gravi rischi per l'incolumità personale o danni alle apparecchiature.

#### GEFAHR VON MATERIALSCHÄDEN UND GEHÄUSEERHITZUNG

- · Die Seitenwände können heiß sein. Lassen Sie das Produkt abkühlen.
- bevor Sie es berühren.
- · Beachten Sie die Montageanweisungen,
- Führen Sie keine Flüssigkeiten oder Fremdkörper in das Produkt ein.

Die Nichtbeachtung dieser Anweisung kann Körperverletzung oder Materialschäden zur Folge haben.

#### 材料损坏和高温外壳的危险性

- 产品的一侧面板可能很热, 在其冷却前请不要触碰。
- 遵照正确的安装说明, 包括扭矩值。
- 请勿让液体及其他异物进入本产品。

如不能正确执行这些操作说明 极有可能造成严重人体伤害或者设备的损坏。